




Before you set up and operate your Ultracore BCS, refer to the "Important Regulatory and Safety Notices to Service Personnel" document that was included with your unit. It is also recommended to refer to the *Ultracore BCS User Guide* which is available from our website.

? Have a question? Call our free, 24-hour technical support hotline to speak with a live product specialist located right here in our facility.
Tel: (+1) 613 • 652 • 4886
Email: techsupport@rossvideo.com

1.0 Rack Mounting

1. Unpack your Ultracore BCS from its shipping box.
2. Mount the Ultracore BCS to the front of the rack cabinet using rack screws.
3. Remove the plastic film from the Ultracore BCS front panel.

CAUTION: Adequate ventilation within a rack frame must be maintained. Ensure side to side ventilation is not compromised.

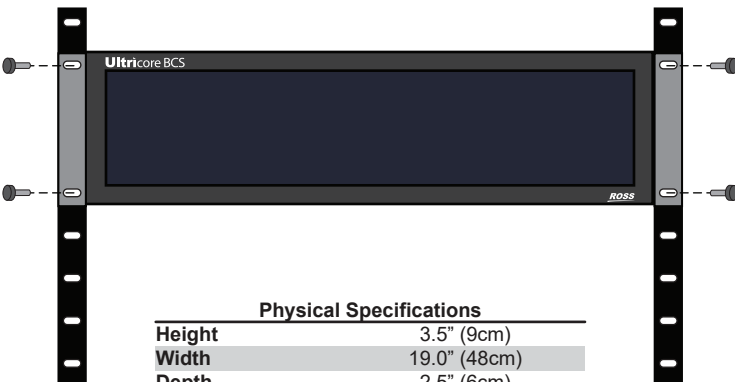

Physical Specifications


Height	3.5" (9cm)
Width	19.0" (48cm)
Depth	2.5" (6cm)
Weight	5.25lb (2.40kg)
Temperature	Op: 0°C to +40°C Non-op: -20°C to +60°C

2.0 LAN or Network Cabling

To connect the Ultracore BCS to your LAN or network

- Connect an Ethernet cable from your network into **ENET 1**. This is the network connection for the Ultracore BCS.

Note: The Ultracore BCS must be connected to the same subnet as the devices it will communicate with and the DashBoard client that will be used to configure the Ultracore BCS.

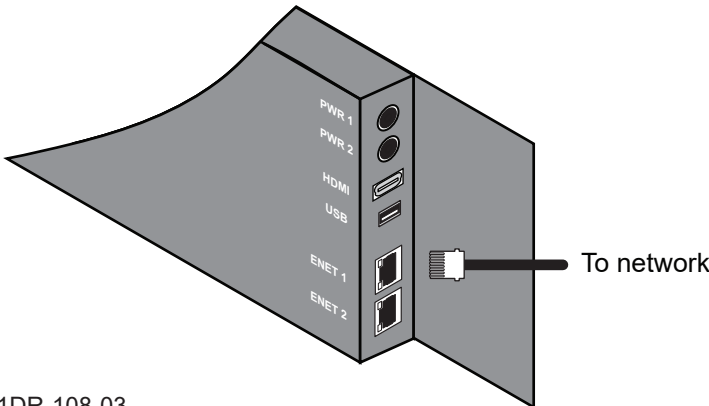


3.0 Power Cabling

To connect the primary power supply

1. Connect the power supply cable to **PWR 1** port on the Ultracore BCS.
2. Connect the power supply to a suitable AC mains supply.

Note: The Ultracore BCS automatically powers on when power is applied.

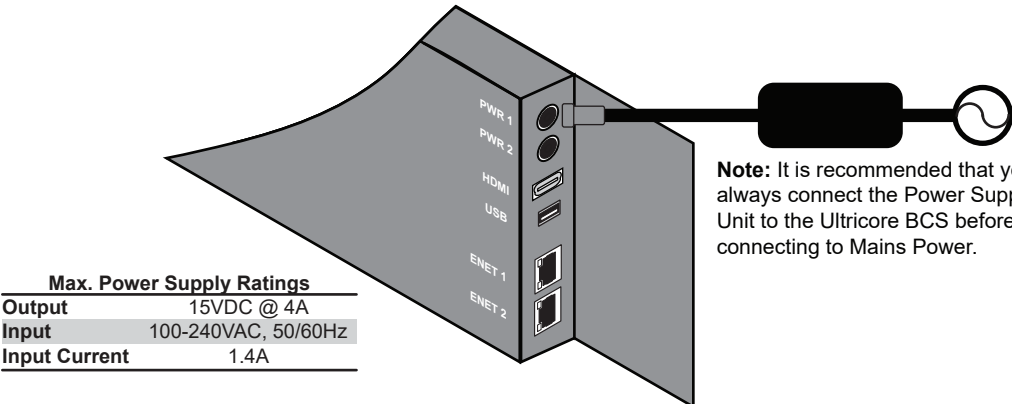

Note: It is recommended that you always connect the Power Supply Unit to the Ultracore BCS before connecting to Mains Power.

Max. Power Supply Ratings	
Output	15VDC @ 4A
Input	100-240VAC, 50/60Hz
Input Current	1.4A

To connect the optional secondary power supply

1. Connect the second power supply unit to the **PWR 2** port on the Ultracore BCS.
2. Connect the cable from the second power supply to a suitable AC mains supply.

4.0 Specify the IP Address

1. Download and install the DashBoard client software to a computer connected to the same IP address subnet as the Ultracore BCS. The DashBoard software is available from our website.

Note: Ultracore BCS ships with the default IP Address of 192.168.20.160.

2. Launch the DashBoard client software on your computer.
3. Select **Window > Preferences > Selected network interface**.
4. Select the ENET port that is connected to the Ultracore BCS LAN.
5. Click **Apply**, then click **OK**.
6. Re-start the DashBoard client software.
7. Select **File > Show Walkabout** to display the Walkabout table.
8. Click **Refresh**.
9. In the **Walkabout** table, locate the Ultracore BCS you want to configure.
10. Use the **Name** field to assign a unique identifier to the Ultracore BCS.
Note: After you edit a cell in the **Walkabout** table, press **Enter** to confirm your edits. To verify your changes, wait up to 3 seconds then click **Refresh**.
11. Use the **Address** field to assign a new IP Address (as specified by your IT Group).
12. Ensure the **Netmask** field is set to match your network requirements.
13. Use the **Gateway** field to enter the IP Address for connection outside of the local area network (LAN).
14. Click **Reboot** in the row of the Walkabout table for the Ultracore BCS.

5.0 Ultracore BCS in the Tree View

1. In the DashBoard client main toolbar select **File > New > TCP/IP DashBoard Connect or openGear Device**.
2. In the **IP Address** field, enter the IP Address that you assigned to the panel in the previous procedure.
3. Click **Detect Device Information** to auto-populate the remaining fields.
4. Click **Finish** to display the Ultracore BCS in the Tree View of DashBoard.
5. Locate and expand the **UltracoreBCS** node in the Tree View of DashBoard.

6.0 Installing License Key(s)

1. In DashBoard, expand the Ultracore BCS node to display a list of sub-nodes in the Tree View.
2. Expand the **Devices** node.
3. Expand the **Controllers + Matrices** node.
4. Double-click the node for your Ultracore BCS.
5. Click **Licenses**.
6. Make a note of the character string in the **Request Code** field for each feature you wish to enable.
7. Contact your Ross representative to obtain your License Key(s).
 - a. Provide your name, your facility name, and the Request Code(s) from step 6.
 - b. You will be given a License Key for each feature. Each Key must be entered in the applicable field in the **Licenses** table.
8. Enter each provided **License Key** in the applicable field of the **License** table.
9. Click **Apply** in the row for each License Key you entered in step 8.
10. Verify that the **Count** field now reports each installed License Key.

7.0 Ultrix-IP and Ultracore-IP

1. When using an Ultracore-IP with Ultrix-IP, establish a connection point between the Ultracore BCS to an ULTRIX-FR5 router (with an Ultrix-IP blade) that has PTP configured. Refer to the *Ultrix User Guide*.
2. Ensure the required Ultracore-IP licenses are installed on the Ultracore BCS.
3. Set up IP addresses for the ENET ports on the router and Ultracore BCS.
4. Set up the transmitter multicast IP addresses.
5. Use the **System Status > Ultracore-IP** interface to find advertised NMOS SMPTE 2110 streams.
 - Ensure to allow time for RDS discovery to complete on Ultracore-IP.
 - Verify that the Ultracore BCS lists the detected NMOS senders and/or receivers in its Database > Destination and Sources tabs.